




**Aertssen Kranen**  
 Laageind 91  
 B-2940 Stabroek  
 T +32(0)3 561 09 60  
 F +32(0)3 561 09 99  
 info.kranen@aertssen.be

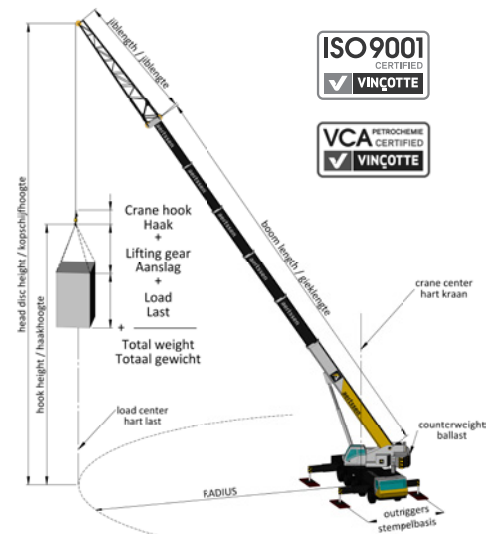

HOME

## Welke kraan heb ik nodig? / Which crane do I need?

Bepaal aan de hand van de benodigde radius, het gewicht van de last en de benodigde gieklenkte welke kraan u nodig heeft. Deze tabel is slechts een indicatie. **Voor verdere informatie kan u steeds bij ons terecht.** [sales.ak@aertssen.be](mailto:sales.ak@aertssen.be).

Decide which crane you need based on the required radius, the weight of the load and the required boom length. This chart is only an indication. **For further information, you can always contact us.** [sales.ak@aertssen.be](mailto:sales.ak@aertssen.be).

CLASS	Extra counterweight	Radius 10 m	Radius 20 m	Radius 30 m	Radius 40 m	Radius 50 m	Max. boom length	Max. boom length with jib
40 T	/	8 t	2 t	1 t	-	-	37 m	-
city 50 T	/	11 t	4 t	1 t	-	-	36 m	49 m
60 T	x	15 t	5 t	2 t	-	-	43 m	58 m
80 T	/	17 t	5 t	2 t	-	-	51 m	66 m
90 T	x	22 t	8 t	3 t	1 t	1 t	51 m	66 m
100 T	/	24 t	8 t	4 t	2 t	-	60 m	77 m
120 T	x	30 t	11 t	6 t	3 t	1 t	60 m	77 m
140 T	x	42 t	18 t	10 t	5 t	3 t	60 m	78 m
160 T	x	58 t	21 t	10 t	6 t	3 t	68 m	89 m
200 T	x	63 t	24 t	12 t	7 t	4 t	70 m	91 m
250 T	x	69 t	31 t	17 t	10 t	7 t	70 m	91 m
300 T	x	82 t	36 t	22 t	13 t	6 t	80 m	101 m
400 T	x	146 t	72 t	42 t	28 t	20 t	56 m	141 m
500 T	x	153 t	87 t	55 t	39 t	29 t	56 m	141 m
700 T	x	174 t	102 t	69 t	49 t	36 t	60 m	145 m
750 T	x	201 t	111 t	74 t	52 t	41 t	52 m	143 m

x: required

Capacities in metric tonnes

Dimensions in meters.